

wellgo

C193 KICK STAND PEDAL



www.wellgo.com.tw

維格工業股份有限公司

wellgo

C193 KICK STAND PEDAL

■ PARTS INCLUDED



KICK STAND PEDAL(LEFT)



PEDAL(RIGHT)

BRAKE LEVER FIXING STRAP



POSITIONER




WASHER

維格工業股份有限公司

www.wellgo.com.tw

PEDAL INSTALLATION


Step 1

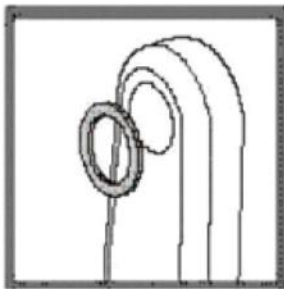

Place washer on to crank arm in the recessed area(step1).

Not all cranks will have a recessed area so the washer is not necessary.

Step 2

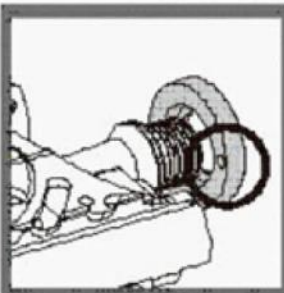

Place the positioner on the pedal spindle so the 3mm hole is located at 3 o'clock position(step 2). And tighten the pedal until it's snug using the 6mm allen key. Final tightening of the pedal will done after the final adjustment step.




Locking pin
Release button

PEDAL INSTALLATION


Step 3

Use the brake fixing strap to lock the rear wheel

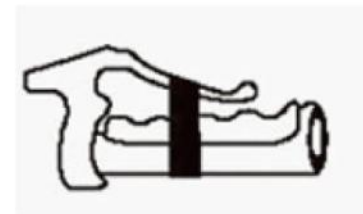

Step 4

Press the red button on the kickstand pedal and open the cage so it makes contact with the ground. Insert the locking pin into the 3mm hole on the positioner. Recommended position of the crank arm is between 5 o'clock and 7 o'clock position.

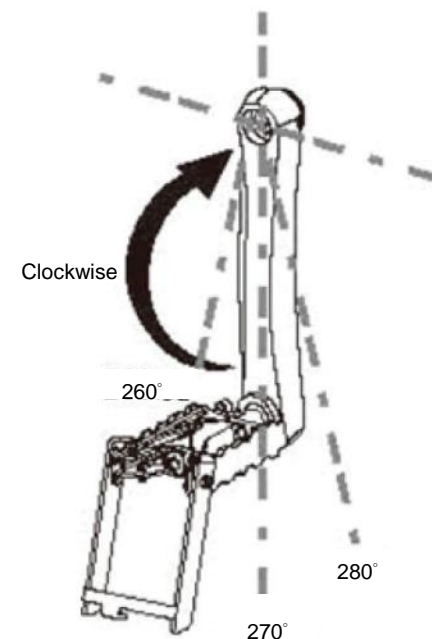

wellgo

C193 KICK STAND PEDAL

Press the red release button and swing the kickstand cage out to maximum position until the fix pin locks into the 3mm postioner hole.



**Slip resistance design
advances its traction
effect.**

www.wellgo.com.tw

維格工業股份有限公司



wellgo

C193 KICK STAND PEDAL

Size : 110*67.2*23 mm

Weight : 280 g/pr

Body: aluminum extruded CNC machined, available for many different anodized colors

Cr-mo spindle, DU/Bearing system

Replaceable pins

Grease

Exit port

Grease port design

Grease Port Design: select one of the ports as an entry port and the other one as an exit port. Slowly insert grease until new grease starts coming out of the exit one. Clean off excess grease and tighten the 2mm grease port screws

www.wellgo.com.tw

維格工業股份有限公司